

TECH CITY CANTINA



California Library Association 2008

Zune Player

<http://www.zune.net/en-US/products/default.htm>

The Zune Player is able to play music, video, pictures and FM radio. A headset is required for listening. You sync the device to a Windows computer with Zune software. You can connect to other Zune devices and purchase media via Wi-Fi (it does not, however, have a web browser for Internet access). It does not require batteries and is charged with a USB charger. It ranges in price from \$150-\$300 depending on size.

1. To turn ON or OFF press and hold >|| on right
2. To navigate **Menu**, use top or bottom of wheel to move through selection:
 - ▶ Music
 - ▶ Video
 - ▶ Pictures
 - ▶ Radio
 - ▶ Community
 - ▶ Settings
3. To select from Menu, press round button in middle of wheel.
4. To pause or mute, press >|| on right.
5. To adjust volume, press up or down on outer wheel.
6. To listen to music or the radio:
 - a. Select **Music** or **Radio** from menu.
 - b. Use scroll wheel to highlight choice.
 - c. Press round button in middle of wheel to select.
7. To return to previous menu, press the back button on the wheel: |<<
8. To pause, press bottom button on the wheel: >||