

TECH CITY CANTINA



California Library Association 2008

Sansa Connect MP3 Player

<http://www.sansa.com/players>

With the Sansa Connect MP3 player you can connect to music, friends, Internet radio and photos from this wireless mobile player. It syncs with Windows Media Player. Listen via internal speakers or connect a headset. It does not require batteries and is charged with a USB charger. It's available for around \$130. This model has been replaced by the Sansa Fuze.

1. To turn ON or OFF press the round button found on the top of the device
2. To access features, press Home on the wheel (on top of wheel) and use the wheel to scroll through the following features
 - ▶ Now Playing
 - ▶ Internet Radio (requires Wi-Fi connection)
 - ▶ Music Library
 - ▶ Get More Music (requires subscription to Yahoo music)
 - ▶ Friends
 - ▶ Photos and Videos
 - ▶ Settings
3. To select a feature
 - a. Stop scrolling on desired feature
 - b. Press round button in center of wheel
4. To return to previous menu, press the back button on the wheel |<<
5. To pause, press bottom button on the wheel >||
6. To import photos and videos, insert microSD card into slot or connect to a computer