

Canon PowerShot A560 Digital Camera

The Canon PowerShot is a digital camera that records video and takes pictures. It takes two AA batteries and uses an SD card for memory. It's available for around \$150.

1. To turn ON or OFF push **ON/OFF** button.
2. To take photos
 - a. Turn wheel to Green Auto Mode
 - b. Push big silver button on top to take picture
3. To zoom in or out use wheel on top right to zoom in or out.
4. To preview photo
 - a. Push button next to image of red camera
 - b. Scroll through photos using right/left buttons on wheel to navigate
 - c. Return to taking photos by pressing button next to image of red camera
5. To delete photos, press bottom of wheel when the picture you want to delete is displayed, and press center button to choose erase.
6. To record a video
 - a. Set wheel on top to image of a movie camera
 - b. Push big silver button on top to start or stop recording
 - c. To review video, push button next to image of red camera
 - d. Press center button twice to play
7. To transfer photos to computer
 - a. Remove SD memory card and insert into computer, *or*
 - b. Connect camera to computer using USB cord