

Flip Video Camera

The Flip Video Digital Camcorder records up to 30 minutes of video and has an internal microphone. It requires two AA batteries to operate. It's available for around \$120.

1. To turn ON or OFF, press the white button below the **play** button.
2. To record video
 - a. Press **Red** button in the center
 - b. To stop recording, press **Red** button again
 - c. To zoom in while recording press the up or down navigation buttons
3. To playback
 - a. To playback the last recording press **Play**
 - b. To stop during play press **Play** again
 - c. To move through recordings use right and left navigation buttons
4. To change volume during playback, press the up (+) or down (-) arrows.
5. To delete recording press **Delete** and **Delete** again.
6. To copy recordings to a computer:
 - a. Slide side button down to expose USB end
 - b. Plug into USB port on your computer
 - c. The Flip camera has software on it that allows you to play and do simple video editing. You can also play the files (.avi) through Windows Media Player after you install the Flip software from the camera.
7. To view recordings on a TV, use a composite cable to plug directly into a TV.