

## Zune 30 GB player

The Zune 30 GB is able to play music, video, pictures and FM radio. A headset is required for listening. You sync the device with Zune software. You can connect to other Zune devices and purchase media via wi-fi. It does not require batteries and is charged with a USB charger. It's available for around \$200.

1. To turn ON or OFF press and hold >|| on right.
2. To navigate Menu, use top or bottom of wheel to move through selection
  - Music
  - Video
  - Pictures
  - Radio
  - Community
  - Settings
3. To select from Menu, press round button in middle of wheel.
4. To pause or mute, press >|| on right.
5. To adjust volume, press up or down on outer wheel.
6. To listen to music or the radio
  - a. Select **Music** or **Radio** from menu
  - b. Use scroll wheel to highlight choice
  - c. Press round button in middle of wheel to select
7. To return to previous menu, press the back button on the wheel |<<
8. To pause, press bottom button on the wheel >||